

# **LAVAMAT 661**

Fully automatic washing machine

Operating Instructions



---

## Please read and follow the instructions in this booklet

---


### Contents

|  |         |
|--|---------|
| Figures  | 4/6     |
| (unfold pages for easy reference)                        |         |
| Your Lavamat   | 8       |
| Check list – What to do before and after every programme | 8       |
| Sorting the laundry                                      | 9       |
| Opening and closing the doors                            | 9       |
| Load sizes   | 10      |
| Washing powder, conditioner and starch                   | 10/11   |
| Explanation of controls                                  | 11 – 13 |
| How to switch the machine on and off                     | 13      |
| Programme charts   | 14 – 17 |
| How to look after your Lavamat                           | 18      |
| Emergency drain  | 18      |
| If you think your machine is not working properly        | 18 – 19 |
| Service / technical data                                 | 20      |


Separate instructions on installation and connection are supplied with the machine.

### Important

To avoid damage during transit we have fitted transit bars to the machine. Please remove these before installing and connecting the machine. You will find details how to do this on the red sticker on the washing machine and in the installation instructions.

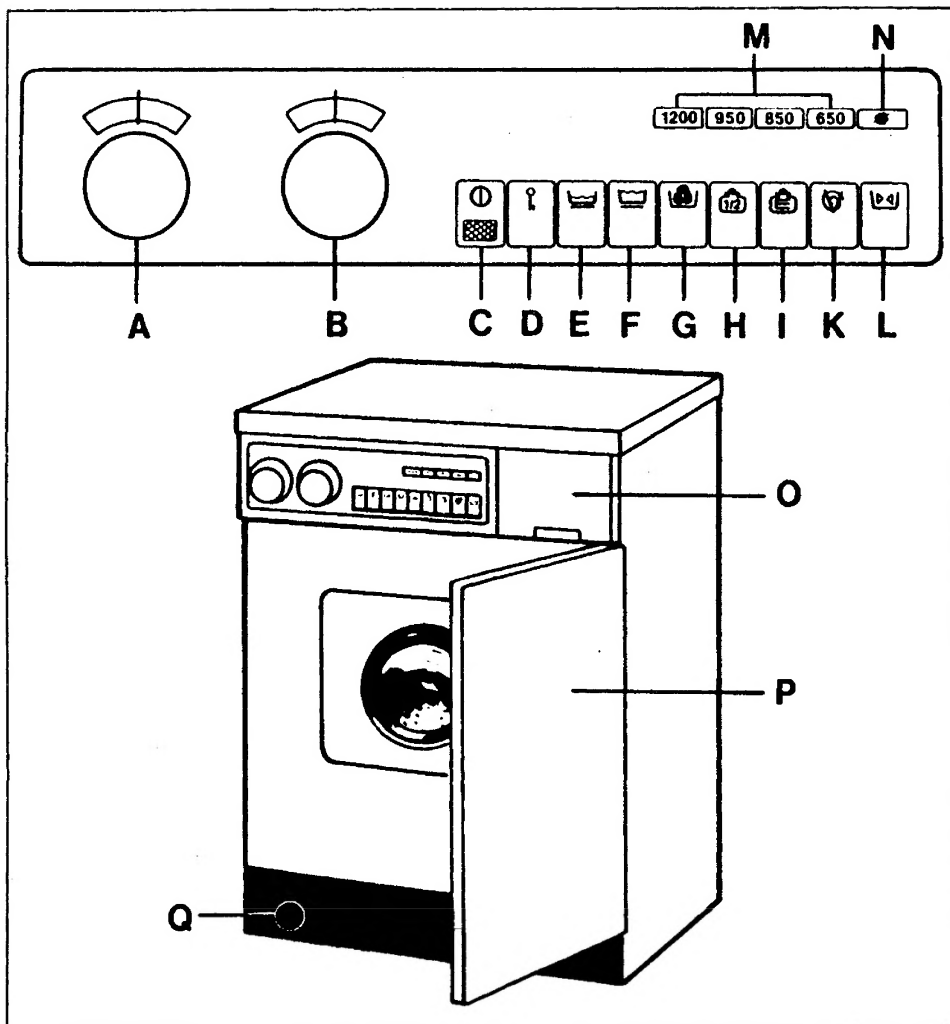


1

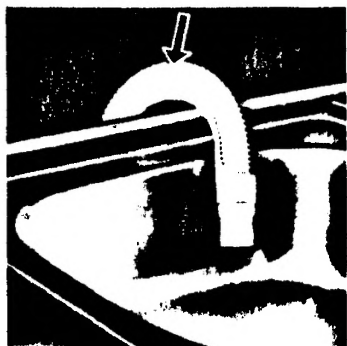


2


4

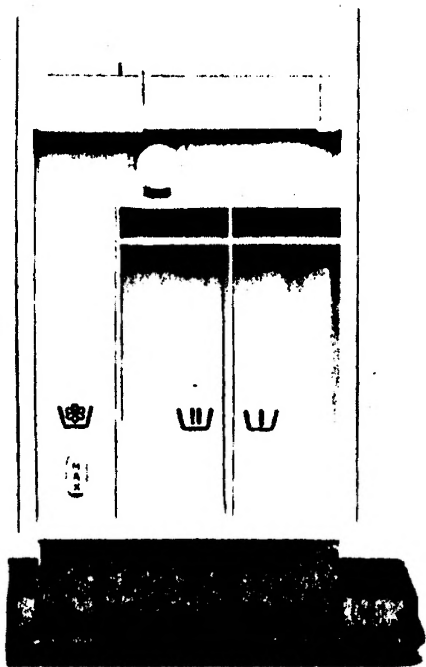


3

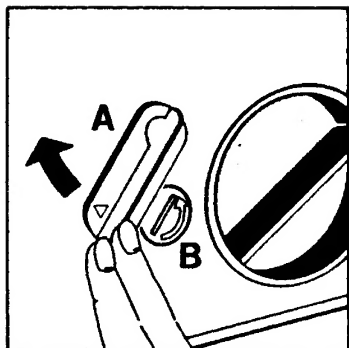


4/A

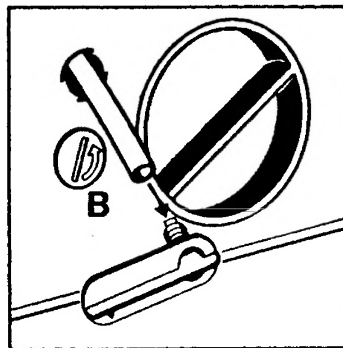


4/B

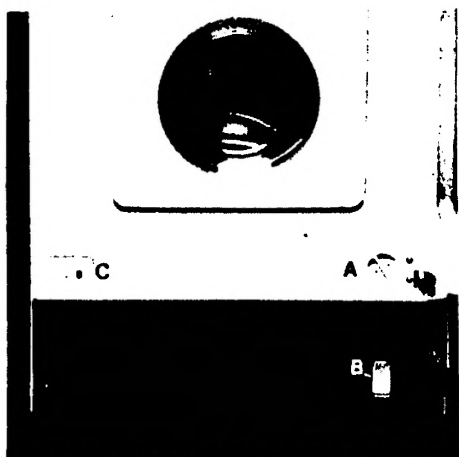


7

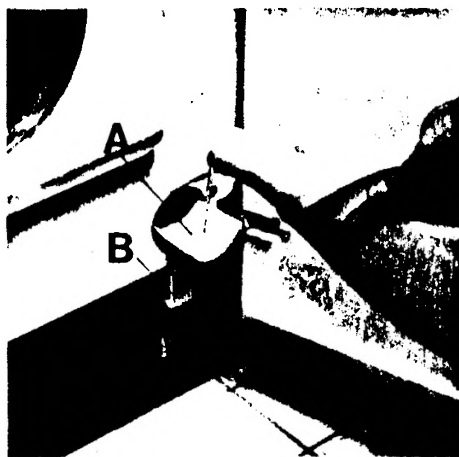

8

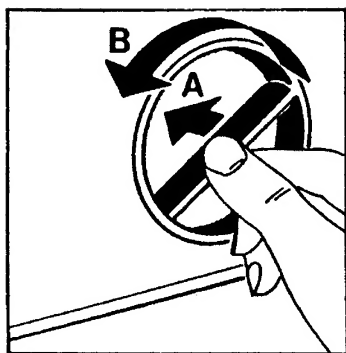


5

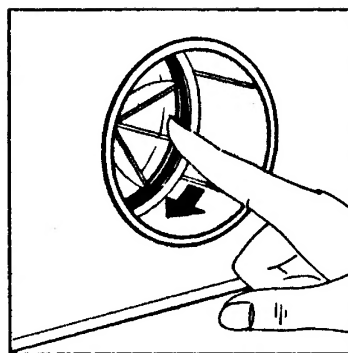


6

## How to open the loading door

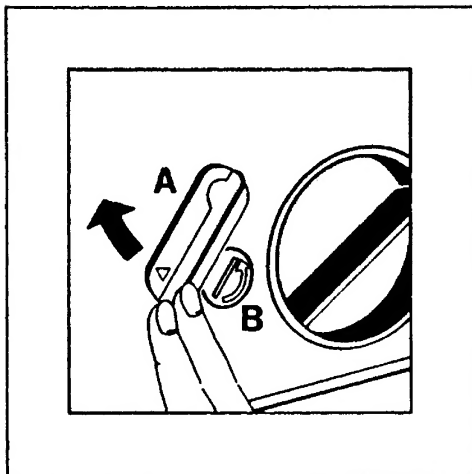

**Opening the loading door – before the machine is connected.**

1. Turn rotary control for emergency drain (A) a quarter turn **anti-clockwise** to the stop position.
2. Using a coin turn disc (B) **anti-clockwise** until the loading door springs open.
3. Turn rotary control for emergency drain (A) in clockwise direction.

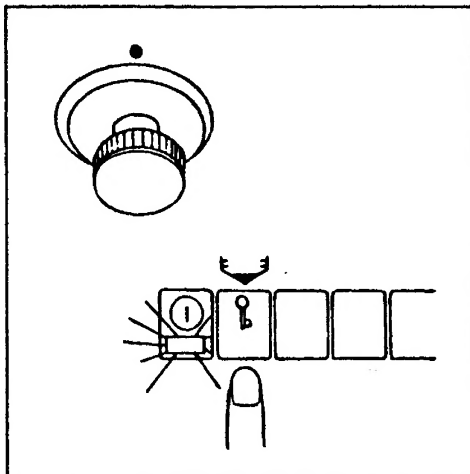

**Opening the loading door – after the machine has been connected to the power supply.**

Press button.

---

## Your Lavamat

---

**Figure 1/A** Wash programme selector and programme sequence indicator

**Figure 1/B** Temperature selector

**Figure 1/C** On/Off button with indicator light

**Figure 1/D** Door release button

**Figure 1/E** Button for easy-care fabrics

**Figure 1/F** Button for delicates

**Figure 1/G** Button for wool

**Figure 1/H** Button for small loads

**Figure 1/I** Button for energy saving programmes

**Figure 1/K** VARIOMATIC button

**Figure 1/L** Button for short programme

**Figure 1/M** Buttons for lower spin speeds

**Figure 1/N** Button to cancel automatic dispensing of fabric conditioner

**Figure 1/O** Detergent dispenser with double-sided programme chart\* removable

**Figure 1/P** Outer door with inner door behind. Rating plate on inside of inner door.

**Figure 1/Q** Drain pump with emergency drain, and emergency door release to the left.

---

## Check list

 
---

### What to do before and after every programme

#### If the machine is not permanently connected:

- Plug in the machine and switch on at the power socket.
- Make sure that the drain hose is not kinked. To hook the hose securely over the sink edge use the hose holder provided (figure 2). If the sink edge is too wide thread a piece of string through the hole in the hose holder (see figure 2/arrow) and secure on the wall or the tap over the sink. **Make sure that the drain hose is not submerged in the pumped off water.**
- Connect the water inlet hoses to the taps.

#### Before you select a programme:

- Open the water taps.
- Open outer door (press top left), open inner door (press door release button ).
- Distribute the laundry in the drum, close the doors.
- Pull open the detergent dispenser (figure 1/3) and pour washing powder and fabric conditioner into the relevant compartments. Close the dispenser carefully.

- Select the wash programme (see programme chart), press the on/off button to start the programme.

#### End of programme:

- Open inner and outer door and remove the laundry from the drum.

If nothing else is to be washed,

- press the on/off button
- return the temperature selector to the "off" position
- turn off the water taps and switch off at the power socket and remove the plug.

---

\* Replacement charts are available from our Service Department.

---



---

## Sorting the laundry

---

### Sorting the laundry:

Check the manufacturer's instructions or the care label inside each garment (see the International Textile Care Labelling Code in the programme chart).

The laundry should be sorted into:  
**Cottons and linens (whites and coloureds), easy-care fabrics, delicate synthetics, woollens.**

---

### Practical Hints

- Do not mix whites and coloureds as the whites will become grey.
- New items tend to lose some of their colour when washed for the first time. It is therefore advisable to wash them separately the first time.
- Woollen items which carry the wool symbol must also bear the description "machine washable". Woollen items which only bear the wool symbol cannot be washed in washing machines.
- Make sure that no metal items (e.g. paperclips, safety pins, pins) are left in the laundry. Fasten buttons, zips, hooks and eyes, tie loose belts, long apron strings etc.
- Remove stubborn stains prior to washing.
- Synthetic curtains should be handled carefully as they snag easily. Remove the hooks or rollers and place the curtains in a pillowcase or washbag, to wash. We accept no responsibility for any damage, through incorrect handling.

---

## Opening and closing the doors

---


### ■ Outer door

**To open:** Press against the top left-hand side of the door (if door is hinged on the left-hand side, press top right-hand side) and the door springs open.

**To close:** Press the door closed until it engages.

The outer door can be opened during a programme without interrupting it.

### ■ Inner door

**To open:** Press door release button  and the door springs open.

The door is locked throughout the programme.

It can only be opened after the programme has finished.

**To close:** Close the door firmly to engage the lock.

### Useful advice

How to open the door during a power cut, see page 18.

How to open the door if the machine is not connected:

1. Turn rotary control for emergency drain (A) a quarter turn **anti-clockwise** to the stop position.
2. Using a coin turn disc (B) **anti-clockwise** until the loading door springs open.
3. Turn rotary control for emergency drain (A) in clockwise direction.

## Load sizes

You will find details as to how much laundry you can wash in your machine in the programme chart but you may find the following general information useful:

- When washing cottons and linens fill the drum with dry laundry leaving a space of a hand's breadth between laundry and the top of the drum.
- A 10-litre (2½ gallon) bucket will take approximately 2.5 kg of tightly packed dry laundry (cottons and linens).

- Distribute the laundry in the drum as loosely as possible.

### Useful advice:

If you are washing a single large item, e.g. a towelling dressing gown or bath mat this may cause vibration and instability of the machine. It does not affect the operation of the machine.


## Washing powder, conditioner and starch

- In an automatic washing machine you need to use a low lather washing powder. We recommend Ariel automatic which has been specially formulated for automatics.
- To soft rinse or starch laundry be sure to use liquid fabric conditioner (we recommend Lenor) or starch. If, however, you wish to use powder starch, then dissolve the starch according to the manufacturer's instructions and **pour the dissolved starch straight into the drum** after the wash programme has finished and select the separate starching programme.
- How much washing powder you use depends on the water hardness (soft, medium, hard, very hard), the quantity of laundry and the degree of soiling. Your local Water Board will advise you on the hardness of the water in your area. On the washing powder packet you will find instructions as to how much powder to use (according to water hardness).

### PLEASE NOTE:

- Your machine is equipped with a device which utilises all the detergent you add for the wash without losing any.
- For this reason you can reduce the amount of detergent recommended on the packet by 20% (1/5).
- This feature means you save money but maintain excellent wash results and you contribute towards protecting the environment.
- Do not fill any measuring beakers supplied with




the detergents to the levels marked but follow our recommendations above.

- When washing lightly soiled laundry reduce the amount of detergent even further or eliminate the pre-wash.
- When washing small loads – with  load button – reduce the amount of powder by 1/3.
- **Important!** Do not use any bleaching agents containing chlorine or sulphur or acidiferous descalers.

Before selecting a programme, pour washing powder and fabric conditioner into the relevant compartments of the dispenser.

To do this pull open the dispenser drawer.


You will find 3 compartments (figure 3):

- |  |  |
|--|--|
| Compartment           | washing powder for the <b>pre-wash</b>   |
| Compartment  (centre) | washing powder for the <b>main wash</b>  |
| Compartment  (left)   | liquid fabric conditioner or starch. <b>Do not fill above "MAX" indicator level as otherwise the liquid may drain immediately.</b> |

The detergent dispenser is designed to take low lather washing powder or low lather liquid detergent. But the liquid detergent can only be used if you are selecting a wash without a pre-wash. **Carefully close the dispenser completely.** The dispenser can be removed from the machine for cleaning.

## Washing powder, conditioner and starch

### Automatic dispensing of fabric conditioner

Your machine is equipped with an automatic feed-in of the fabric conditioner. This eliminates having to add fabric conditioner to compartment  manually each time soft rinsing is required.

The machine does this automatically for you from a major storage container which is located on the right-hand side below the inner door (see figure 7). To fill the container you require 4.5 litres maximum of fabric conditioner.


 
#### To fill the container:

- Unscrew container cap (figure 7/A) anti-clockwise and pull filler nozzle forward (figure 8/A).
- Carefully fill the container with fabric conditioner (never use starch, bleach or any other treatment agent in the container) until fabric conditioner is visible in the upper window (next to the locking cap) (figure 8/B).
- Replace the cap and turn clockwise to close the container.


Below the cap you will see a window (figure 7/B). When the fabric conditioner is no longer visible in the window, replenish the container. You can choose how much fabric conditioner

should be dispensed by setting the slide switch (figure 7/C) to the relevant setting as follows:

|                          |                  |
|--------------------------|------------------|
| Setting ●                | = approx. 30 ml  |
| (small dosage)           |                  |
| Setting ●●               | = approx. 75 ml  |
| (normal dosage)          |                  |
| Setting ●●●              | = approx. 125 ml |
| (for extra soft laundry) |                  |

**Important:** If you intend to change over to a different make of conditioner, you **must** first make sure that the product previously in the reservoir is completely used up. If you are using fabric conditioner concentrates **do not** use the automatic dispensing facility. Concentrates must only be added to the fabric conditioner compartment . In this case cancel the automatic dispensing facility by pressing button .

#### Note:

- If your washing machine is installed in a room which may be affected by frost you cannot take advantage to the automatic dispensing of the fabric conditioner. Frozen or defrosted fabric conditioner cannot be dispensed into the machine.
- To cancel automatic dispensing of the fabric conditioner (e.g. to starch laundry at the end of a wash programme) press button .

## Explanation of controls


With the exception of wool, all fabric can be washed with or without a pre-wash. To select a wash programme set the programme selector (figure 1/A) to the required programme

number, the temperature selector (figure 1/B) to the required temperature and press any selector button(s) required (figure 1/E to N).

### Programme selector

The programme selector has 6 settings for the main and the additional programmes. The programmes are indicated by numbers (see

programme chart) and below the numbers you will find the programme progression. The programme selector must be turned clockwise and only when the machine is switched off.

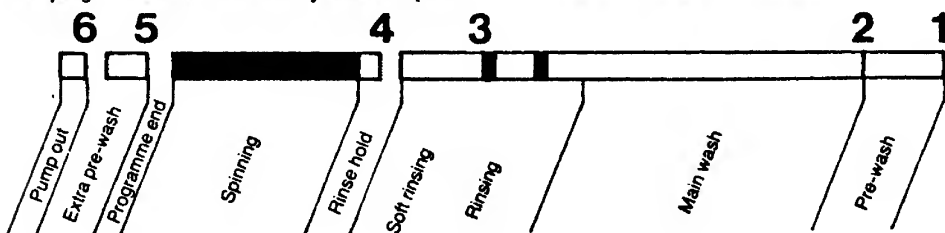

## Explanation of controls

### Temperature selector

The temperature selector is variable from **30°** to **95°**. If the selector is set to "●" the machine will carry out a cold wash.

During a hot wash the glass of the inner door may get hot, please take care and do not touch.

### Selector buttons



**Button for easy-care fabrics**  
(figure 1/E)



**Button for delicate synthetics**  
(figure 1/F)



**Button for wool**  
(figure 1/G)

You will find further details regarding these buttons under "programme cycle" in the programme chart.



**Button for small loads**  
(figure 1/H)

Press this in addition to a selected programme if you want to wash smaller loads. Cottons and linens up to 2.5 kg, easy-care fabrics up to 1 kg. Do not press this button when washing woollens. Although the half load button is very valuable for the smaller loads as the amount of water used for a wash programme is reduced we would like to point out that the most economical wash is still the full capacity one.



**Button for energy saving programmes**  
(figure 1/I)

Press this button in addition to the selected programme if you want to wash lightly to normally soiled cottons and linens and easy-care fabrics.


 
By selecting E in conjunction with a programme at **60°** or **95°** you will save energy as the machine will carry out a somewhat longer wash at 40° C instead of 60° C or at 60° C instead of 95° C.



Press both buttons for a very economical wash of small loads of lightly soiled cottons and linens and easy-care fabrics.






**Button for VARIOMATIC Spinning**  
(figure 1/K)

1. Press this button if you want a VARIOMATIC spin instead of the normal spin at the end of a cotton/linen programme. The VARIOMATIC spin is a sequence of spins with loosening of the laundry in between each spin. This reduces tangling and creasing of the laundry. However, it increases the length of the programme by approx. 20 mins. If you do not select this button the normal spin follows automatically after the last rinse.
2. To cancel the "rinse hold" when washing easy-care fabrics, delicates and woollens, press this button. The laundry is then automatically spun with gentle VARIOMATIC. If you do not select this button the laundry is left in the last rinse water or soak solution (extra pre-wash). For pump out and spin select programme 4 + button  + . For pump out only select programme 6.



**Button for short programmes**  
(figure 1/L)

Press this button in addition to the selected programme number when washing lightly soiled laundry (cottons, linens and easy-care fabrics). Depending on the temperature selected the programme may take up to 45 minutes.

Please note that you **cannot** use button  together with buttons  + .

---

## Explanation of controls

---

|     |     |     |
|-----|-----|-----|
| 950 | 850 | 650 |
|-----|-----|-----|


 
**Buttons for lower spin speeds (figure 1/M)**

Press one of these buttons if you wish to reduce the spin speed from 1200 r.p.m. to a lower one. If you do not select one of these buttons the laundry will be spun at 1200 r.p.m.



**Button to cancel automatic dispensing of fabric conditioner (figure 1/N)**

Press this button if you do not want the clothes to be treated with fabric conditioner.

If you wish to add fabric conditioner to the dispenser compartment  or starch (direct into the drum) cancel the automatic dispensing facility of the fabric conditioner by pressing button .

---

## How to switch the machine on and off

---

### How to start the machine

1. Turn the programme selector **clockwise** to the required programme, select the required temperature and press any buttons as required (see programme chart).
2. Press the on/off button. The indicator light will come on and the programme will begin.

The programme selector will rotate during the programme, stopping temporarily during the heating up period.

---

### How to switch off the machine

At the end of the programme press the door release button to open the inner door. Remove the laundry.

 
 







If the programme selector has stopped on "rinse hold" turn the programme selector to 4/6 – see programme chart.

You can now open the door and remove the laundry.

If nothing else is to be washed:

 


- Press the on/off button – the indicator light will go out,
- return the temperature control of the "off" position,
- close the water taps and switch off at the power socket and remove the plug.

## Main programmes




| International Textile Care Labelling Code   | Fabrics  | Type of laundry  | Programme       | Load size               |
|---|--|--|-----------------|-------------------------|
|    | White cotton and linen articles without special finishes   | Bed and table linen, towels, underwear, white or colourfast                      | Hot wash        | up to 5 kg <sup>1</sup> |
|    | Cotton, linen or rayon articles without special finishes where colours are fast at 60°C  | Coloured blouses, aprons, overalls, bed linen, shirts, towels                    | Coloureds       | up to 5 kg <sup>1</sup> |
|    | Cotton, linen or rayon articles colours are fast at 40°C but not at 60°C   | Deep coloured laundry  | Coloureds       | up to 5 kg              |
|    | White cotton articles with special finishes capable of being boiled but requiring drip drying or delicate white cottons and linens | Shirts, bed linen, nappies, baby clothes   | Easy-care       | up to 2 kg              |
|    | White nylon; white polyester/cotton mixtures   | Blouses, shirts, overalls  | Easy-care       | up to 2 kg              |
|   | Coloured nylon; polyester; cotton and rayon articles with special finishes; acrylic/cotton mixtures; coloured polyester/cotton     | Sheets, pillow cases, duvet covers, shirts, blouses, skirts, trousers, underwear | Easy-care       | up to 2 kg              |
|   | Delicate synthetics  | Jumpers, blouses, dresses, curtains  | Delicates       | up to 2 kg              |
|    | Wool, including blankets and wool mixtures with cotton or rayon; silk  | Machine washable woollens  | Wool            | up to 1 kg              |
|   | Cottons, linens, easy-care fabrics except delicates and wool   | Lightly soiled laundry   | Short programme | up to 2 kg              |

| Programme Selection          |                      |         | Programme Cycle   |   |
|------------------------------|----------------------|---------|---|---|
| Programme Selector           | Temperature Selector | Buttons |   |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses with intermediate spinning – final spin              | <p><b>1 with pre-wash</b><br/><b>2 without pre-wash</b></p> <p><b>*) Load size for</b><br/>           ● Lightly and normally soiled laundry 5 kg<br/>           ● Heavily soiled laundry 3.5 kg</p> <p><b>*) Rinse hold</b><br/>           The laundry is left in the last rinse water. Turn the programme selector to setting 4 + button  +  (pump out and gentle VARIOMATIC spin) or to setting 6 (pump out only).</p> <p><b>To cancel Rinse Hold</b><br/>           Press button  as part of the programme selection for easy-care fabrics, delicate synthetics or wool. The programme finishes with a gentle spin.</p> <p><b>Note:</b><br/>           Please turn to page 8 for information on what to do before starting a wash programme.</p> |
| Energy saving programme or 2 | E                    |         |   |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses with intermediate spinning – final spin              |   |
| Energy saving programme or 2 | E                    |         |   |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses with intermediate spinning – final spin              |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses –<br>rinse hold*)                                    |   |
| Energy saving programme or 2 | E                    |         |   |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses –<br>rinse hold*)                                    |   |
| Energy saving programme or 2 | E                    |         |   |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– 3 rinses –<br>rinse hold*)                                    |   |
| or 2                         |                      |         | Pre-wash – main wash<br>– fills to high water level<br>– 3 rinses –<br>rinse hold*)     |   |
| 2                            |                      |         | Main wash – fills to high water level – gentle wash action – 3 rinses –<br>rinse hold*) |   |
| 2                            |                      |         | Very short main wash – 3 rinses –<br>rinse hold*)                                       |   |

## Additional programmes

| Programme                           | Laundry  | Load size    | Programme selection |   | Buttons  |
|-------------------------------------|--|--------------|---------------------|---|--|
|                                     |  |              | Programme Selector  | Temperature Selector  |  |
| Soft rinsing – starching – spinning | Cottons and linens                               | up to 5 kg   | 3                   | –   | ①  |
| Soft rinsing – starching            | Easy-care fabrics and delicate synthetics        | up to 2 kg   | 3                   | –   |  ① |
| Spinning                            | Cottons and linens                               | up to 5 kg   | 4                   | –   | ①  |
| Pump out – VARIOMATIC gentle spin   | Easy-care fabrics, delicate synthetics, woollens | up to 2 kg   | 4                   | –   |  ① |
| Extra pre-wash – soak programme     | Cottons and linens, heavily soiled               | up to 3.5 kg | 5                   |  | ①  |
| Pump out                            | For laundry which should not be spun             | –            | 6                   | –   | ①  |



|   |   |
|---|---|
| programme cycle   |   |
| rinsing – spinning<br><br>rinsing with<br>rinse hold*)<br><br>spinning – for laundry<br>washed and rinsed by hand<br><br>pump out – gentle spin –<br>or laundry washed by hand<br><br>pre-wash (soaking) – fills to high<br>water level – laundry is left in the wash<br>solution. Proceed as for <b>rinse hold</b> *)<br><br>pump out, e.g. following a<br>programme with <b>rinse hold</b> *) | <p><b>*) Rinse Hold</b></p> <p>The laundry is left in the last rinse water. Turn the programme selector to setting 4 + button  +  (pump out and gentle spin) or setting 6 (pump out only).</p> <p><b>To cancel Rinse Hold</b></p> <p>Press button  as part of the programme selection for easy-care fabrics, delicate synthetics and wool. The programme finishes with a gentle VARIOMATIC spin.</p> <p><b>Note:</b></p> <p>Please turn to page 8 for information on what to do before starting a programme.</p> |

---

# How to look after your Lavamat

---

## Protecting the machine against frost

Any damage due to frost is not covered by warranty. If the machine is situated in a room which might be affected by frost, any water must be removed from the drain pump (see

**"Emergency drain"** below) as well as from the water inlet hoses (disconnect the inlet hoses from the water taps and drain).

---

## Care and maintenance

The **detergent dispenser** requires cleaning from time to time.

To do this remove the drawer completely by pulling it out. Clean the dispenser. Slot it into the guide rails and push to close.

The **drum** of your machine is made of stainless steel and cannot rust. However, rust may be introduced with the laundry (zips, paper-clips,

hair pins, tacking or safety pins). Remove such stains with a stainless steel cleaner.

**Do not use any abrasives.**

Do not use furniture polish or abrasive cleaning agents to clean the fascia panel of the machine. To clean the fascia panel use lukewarm water only.

---

## Emergency drain

If you wish to remove your laundry during a power cut or if the machine is defective use the emergency drain facility to empty the water.

1. Turn control **A** (fig. 4a) a quarter turn **anti-clockwise** to the stop position. Pull emergency drain tube forward (fig. 4b) and remove rotary control. Drain residual water into container (place a cloth under the container).

2. To open the loading door turn the disc **B** with a coin **anti-clockwise** until the door springs open.
3. Replace rotary control on emergency drain tube. Push in emergency drain tube and secure rotary control by turning a quarter turn clockwise.

**Take care when draining any hot wash solution**

---

## If you think your machine is not working properly

---



Non functioning of your washing machine is mostly due to minor causes which you can rectify yourself. Before you call out a service engineer please check through the following fault finding chart.

### The inner door cannot be opened

See page 9 "Opening and closing the doors".

### The programme does not start

- Is the machine plugged in?
- Are the fuses in working order?
- Have you closed the inner door properly?
- Have you pressed the on/off button?

### The machine does not fill with water

- Have you turned on the taps?
- Are the filters (where fitted) in the water inlet hoses blocked?

The filter is located where the hose attaches to the tap. A further filter is located in the hose connection to the machine. Unscrew the hose and clean the filter under running water.

---

## If you think your machine is not working properly

---

### The machine vibrates or moves

- If there is too little laundry in the drum (e.g. just one dressing gown, bath mat etc) this may lead to vibration. Therefore, wash more items. However, movement may also result from:
  - Blocked drain pump.
  - Kinked or twisted drain hose.
  - Transit bars have not been removed.
  - The machine is not installed properly (see installation instructions supplied).

### The machine is oversudsing

- Have you used too much washing powder?  
Use less powder for the next wash or omit the pre-wash.
- Have you used a low lather powder?

### Water is leaking from underneath the machine

- Check the water inlet hose connections to the taps and to the machine. Check the drain hose connection to the machine.
- Check the water inlet and outlet hoses for leaks.
- Check that the cover to the pump is closed properly. (See "Cleaning the drain pump", point 5).

### The machine did not spin properly or pump out completely

- Is the water drain hose kinked or twisted?  
In this case the drain pump cannot pump out sufficient water.
- Is the drain pump blocked?  
(See "Cleaning the drain pump").

### The machine does not pump out any water

This means the drain pump may be blocked and would require cleaning as follows.

#### Cleaning the drain pump

1. Switch off at the power socket and remove the plug.
2. Empty drain pump (see "Emergency drain" on page 18).
3. Push and unscrew cover to pump **anti-clockwise** (fig. 5) and pull out to remove.
4. Remove the obstructions blocking the pump and make sure that the pump impeller (fig. 6) is rotating fully and not impeded by any particles lodged behind the impeller.
5. Replace pump cover, giving it a slight push and close it by turning it **clockwise**. Make sure it is closed properly otherwise water will leak from the pump.
6. Close emergency drain tube with rotary control and push back into the machine. Secure rotary control to the machine by giving it a quarter turn **clockwise**.

---

## Note

---

Please use the fault-finding chart "If you think your machine is not working properly" as a check list for the proper performance of your machine.

If you call a service engineer in connection with one of the aforementioned problems please note that the cost involved for this call will have to be passed on to you even during the warranty period.

## Service

Should you be unable to locate the cause of the problem in spite of the check list "If you think your machine is not working properly", then please contact your AEG Service Department.

If you require to have your machine serviced you will assist the Service Department by quoting the F and E numbers which you will find on the rating plate on the inside of the inner door.

For easy reference we would recommend that you transfer these numbers in the space provided below:

Product number (E-No.) \_\_\_\_\_

Serial number (F-No.) \_\_\_\_\_

## Technical Data

|   |  |
|---|--|
| <b>Dimensions:</b><br>with worktop:<br>(where fitted)<br>Height 85.0 cm<br>Width 60.0 cm<br>Depth 60.0 cm<br>without worktop:<br>Height 82.0 cm<br>Width 59.5 cm<br>Depth 57.0 cm | <b>Capacity:</b><br>Depending on the<br>programme up to 5 kg<br>Energy consumption<br>(on cold fill) 2.4 kwh     |
|   | <b>Drum speed:</b><br>Washing 50 r.p.m.,<br>25 r.p.m. (wool)<br>Spinning 1200 r.p.m.<br>or<br>950/850/650 r.p.m. |
| <b>Electrical<br/>connection:</b><br>Please see infor-<br>mation on the<br>rating plate of the<br>appliance.  | <b>Water pressure:</b><br>1 – 10 bar cold water<br>supply<br>0.3 – 10 bar hot water<br>supply                    |
|   | <b>Weight:</b><br>approx. 85 kg  |

The appliance complies with DIN EN 50006/  
VDE 0838 and the requirements laid out in the  
EEC Directive 76/889 and 82/499.